


DRY MIX

PAVE-SET



Description to go in here

Ph: 0800 379 746 www.drymix.co.nz

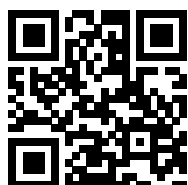

SAFETY ADVICE

Skin/eye Irritation

- Freshly mixed mortar, concrete and grout may cause skin irritation. Prolonged exposure may result in alkaline burning and dermatitis.
- Avoid contact with the skin by wearing suitable gloves and clothing.
- In the event of contact, wash skin immediately with clean water to help minimize possible irritation.
- If any material gets into the eyes, wash immediately and repeatedly with eye wash solution or clean water.
- If irritation persists, seek medical advice.

Respiratory Irritation

- This material may contain a quantity of crystalline silica and suitable respiratory equipment should be used when handling.
- When cutting or abrading concrete keep it wet to avoid creation of hazardous dust. Always wear suitable protective clothing and use respiratory equipment.

PAVE-SET has been specially formulated using graded, washed sand and additives to allow rapid filling of all vertical joints in segmental paving.

PAVE-SET is a jointing material which generally conforms to guidelines for jointing material set out by the Clay Brick and Paver Institute's 'Design Manual One' for Segmental Paving Units.

PAVE-SET is suitable for use in the following areas:

1. Driveways
2. Footpaths
3. Where there is heavy traffic movement
4. Where mobile vacuum sweepers are used
5. Sloping sites
6. In high wind areas
7. Roadways/Airport Standing areas (Where Designed)

PAVE-SET must be used in accordance with the following directions:

PAVE-SET must be spread onto dry pavers and swept into all vertical joints until completely filled. The paved area must then be swept clean of **PAVE-SET** and receive at least two passes of a plate vibrator to ensure compaction of tight joints. A rubber roller attachment or carpet can be used under the plate to protect the paver from damage. Check with the paving supplier as to the suitability of compacting pavers 50mm or less in thickness.

The joints should then be topped up by sweeping more **PAVE-SET** over the area prior to a final compaction consisting of at least two more passes of the plate vibrator.

Before applying an even spray of clean water over the pavement, you must ensure that all excess **PAVE-SET** is swept clean from the surface of the pavers to avoid **PAVE-SET** adhering to the surface.

Thorough gradual soaking of the **PAVE-SET** area should be completed to allow water to penetrate through the jointing material.

Suggest a small (1m) be conducted to ascertain paver suitability (moisture and surface texture) prior to full application.